


UNIVERSAL CHRYSLER-FORD CAMBER/CASTER TOOL

This part should only be installed by personnel who have the necessary skill, training and tools to do the job correctly and safely. Incorrect installation can result in personal injury, vehicle damage and / or loss of vehicle control.

For fast camber-caster changes on most Chrysler and Ford vehicles with movable upper inner shafts.

1. Position tool as shown, and adjust the handle to allow free movement of the tool.
2. Loosen rear cross shaft lock nut slightly.
3. Loosen the front cross shaft lock nut so the shaft can move freely.
4. Adjust camber and/or caster by pulling the control arm outwards, leveraging the tool against the frame, or by letting the control arm slide in to the desired position. Reverse procedure to adjust rear of control arm.

Always check for proper clearance between suspension components and other components of the vehicle.

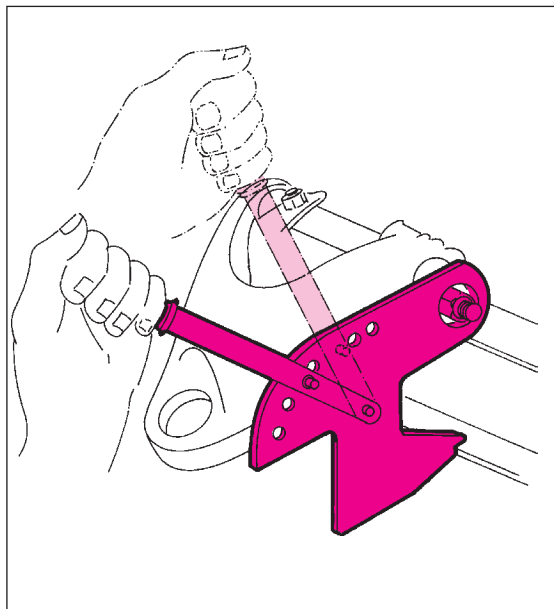

5. After adjustment is made, tighten bolts to manufacturer's specifications.

Parts List

82861	Handle
828621	Head
82863	Ball Pin
82865	Rivet

**Specialty Products Company®**

P.O. Box 923 • Longmont, CO 80502 • (303) 772-2103 • Fax: (303) 772-1918
www.specprod.com • www.spcperformance.com • Email: info@specprod.com
Toll Free Technical Hot Line: 1-800-525-6505