


PART NO. 36087

Instruction Sheet

HENDRICKSON SHIM KIT

This part should only be installed by personnel who have the necessary skill, training and tools to do the job correctly and safely. Incorrect installation can result in personal injury, vehicle damage and / or loss of vehicle control.

The tandem support beam kit (walking beam) consists of two shim packs of which all shims must be installed in their entirety. Both locations must have the same shims in the front and the rear of the bar pin (which must add up to 3/8").

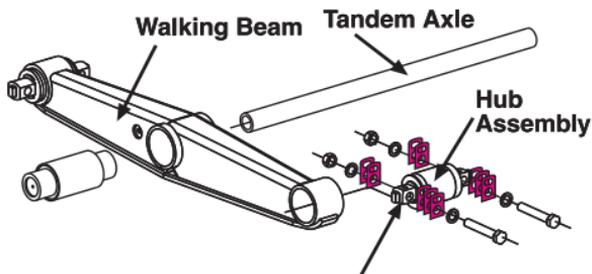

**Specialty
Products
Company**

P.O. Box 923 • Longmont, CO 80502 • (303) 772-2103

www.specprod.com • www.spcalignment.com

Email: info@specprod.com

Toll Free Technical Hot Line: 1-800-525-6505

©2008 Niwot Corp. dba Specialty Products Co. • Printed in U.S.A. • Form No. 980871 • Rev. 11/08